


Note bolt thread area should be on outside of hoist

If this print has colored cables they are for easier understanding of how they are strung. Cables from the factory are colored too. They won't all match to below colors.

READ MANUAL BEFORE USING HOIST.

Manual, parts list and drawing on the web WWW.CRAFTLANDER.COM

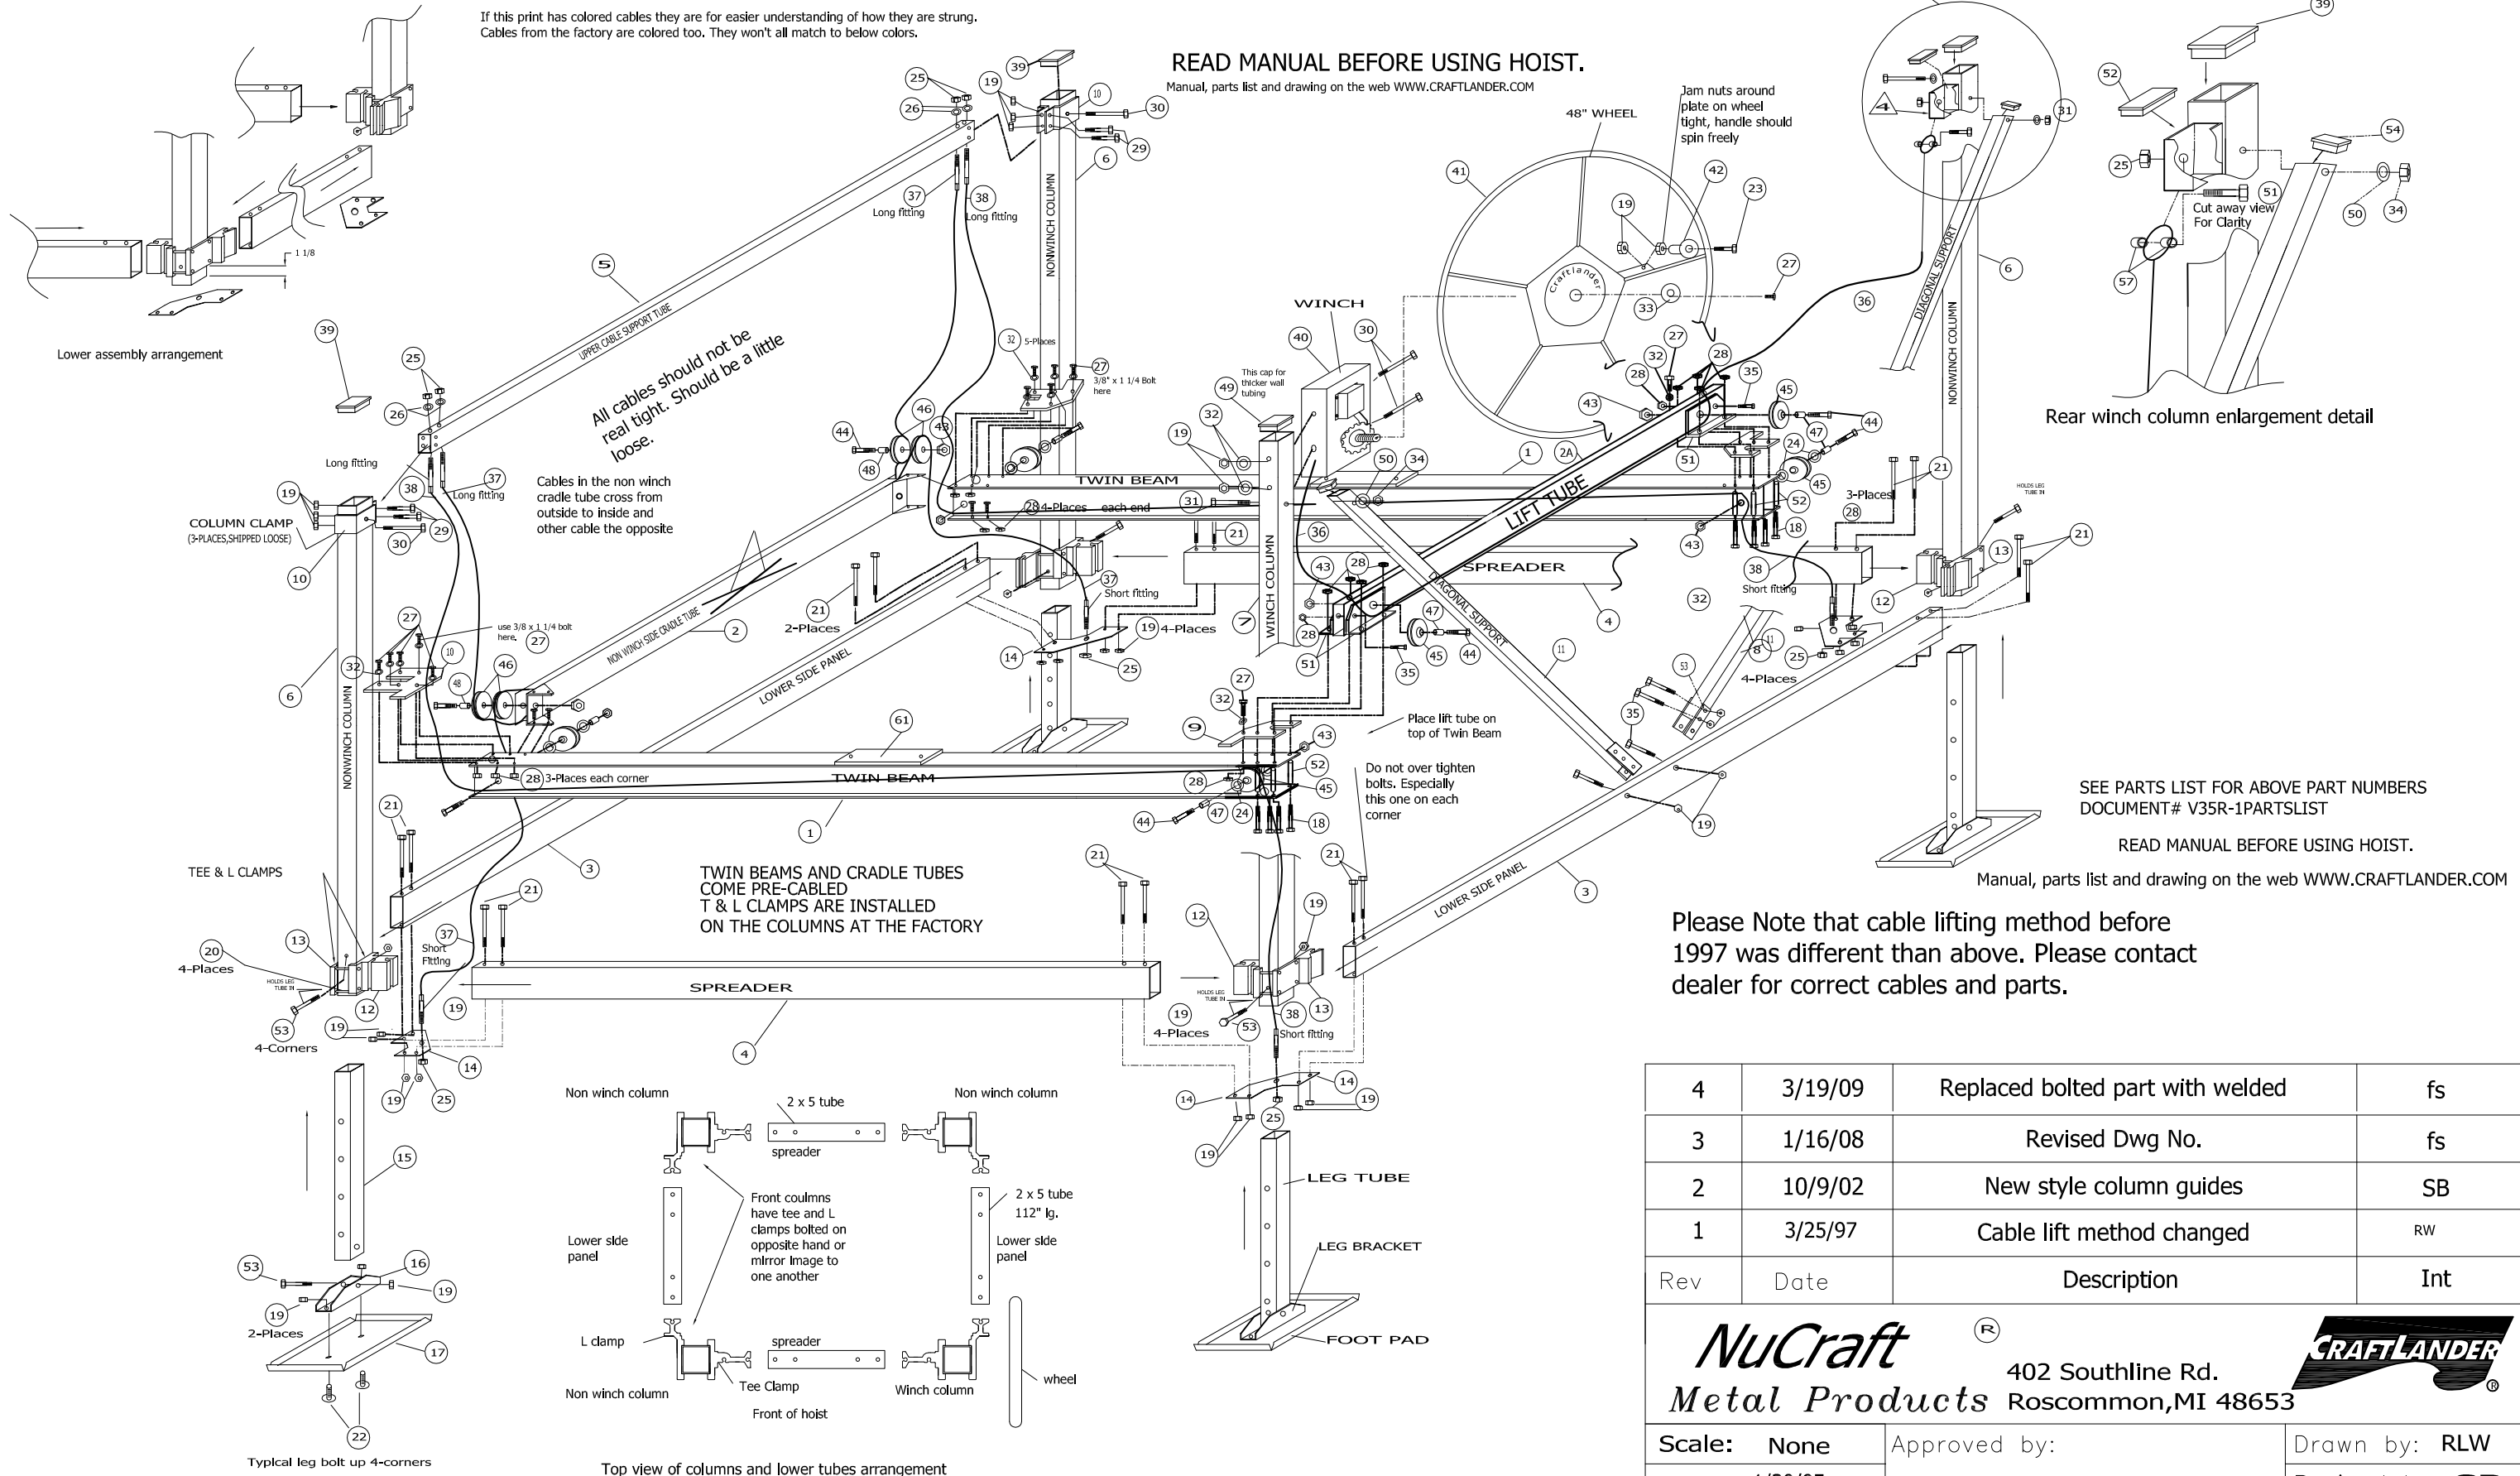

SEE PARTS LIST FOR ABOVE PART NUMBERS DOCUMENT# V35R-1PARTSLIST

READ MANUAL BEFORE USING HOIST.

Manual, parts list and drawing on the web WWW.CRAFTLANDER.COM

Please Note that cable lifting method before 1997 was different than above. Please contact dealer for correct cables and parts.

Rev	Date	Description	Int
4	3/19/09	Replaced bolted part with welded	fs
3	1/16/08	Revised Dwg No.	fs
2	10/9/02	New style column guides	SB
1	3/25/97	Cable lift method changed	RW

NuCraft [®] **Metal Products** **CRAFTLANDER** [®]

402 Southline Rd.
Roscommon, MI 48653

Scale: None	Approved by:	Drawn by: RLW
Date: 1/30/05		Revised by: SB

Assembly & Part locations for V35108 & V35120 Use together with manual to assemble hoist.	Drawing Number V35R-1
--	---------------------------------

This drawing is the property of NuCraft Metal Products. No part of this drawing may be reproduced without proper authorization.

A PDF file of this is available online or a larger drawing can be mailed on request.