INNER FRAME ASSEMBLY


NOTE: WHEN ORDERING REPLACEMENT PARTS A SERIAL NUMBER WILL BE REQUIRED TO ENSURE RECEIPT OF CORRECT ITEMS


Manual, parts list and drawing on the web WWW.CRAFTLANDER.COM

READ MANUAL BEFORE USING HOIST

SEE PARTS LIST FOR ABOVE PART NUMBERS DOCUMENT# A-MH-VHL40R15PARTSLIST

TWIN BEAMS(#1) AND CRADLE TUBES(#2 & 2A) COME PRE-CABLED

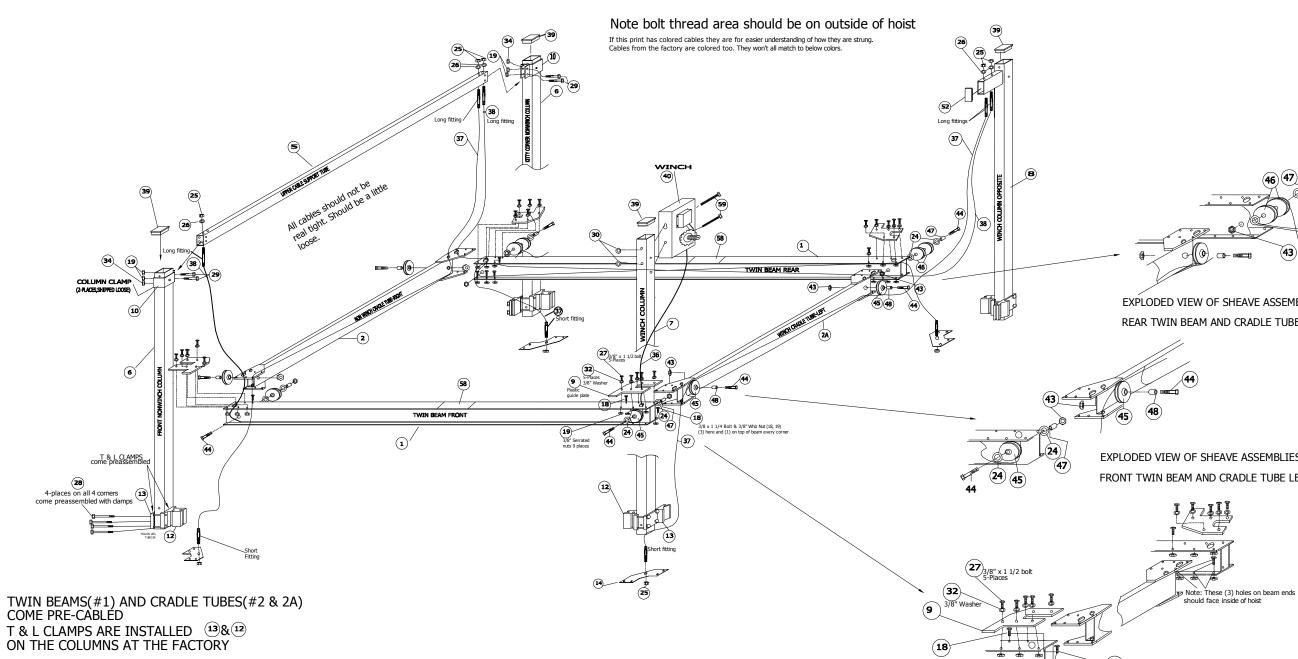

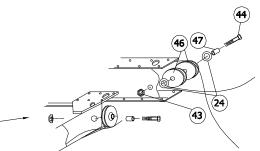

EXPLODED VIEW OF SHEAVE ASSEMBLIES LOCATED IN REAR TWIN BEAM AND CRADLE TUBE LEFT OR RIGHT

EXPLODED VIEW OF SHEAVE ASSEMBLIES LOCATED IN FRONT TWIN BEAM AND CRADLE TUBE LEFT OR RIGHT

3/8 x 1 1/4 Bolt & 3/8" Whiz Nut (18, 19) (3) here and (1) on top of beam every corner

EXPLODED VIEW OF CORNER ASSEMBLY

Rev	Date	Description		I	int	
Metal Products Roscommon, MI 48653						
Scale:	None	Approved by:	Draw	n by:	RLW	
Date:	2/9/10					
Assembly and Part Locations for MH-VHL40120			Drawing Number			