

Note bolt thread area should be on outside of hoist

If this print has colored cables they are for easier understanding of how they are strung. Cables from the factory are colored too. They won't all match to below colors.

AN ASSEMBLY VIDEO FOR THIS HOIST IS AVAILABLE ONLINE AT: WWW.YOUTUBE.COM/CRAFTLANDER

TWIN BEAMS(#1) AND CRADLE TUBES(#2 & 2A) COME PRE-CABLED
T & L CLAMPS ARE INSTALLED (12 & 13) ON THE COLUMNS AT THE FACTORY

6000 LB CAPACITY HIGH LIFT HOIST



SEE PARTS LIST FOR ABOVE PART NUMBERS
DOCUMENT# A-MH-VHL60R15PARTSLIST

READ MANUAL BEFORE USING HOIST.

Manual, parts list and drawing on the web WWW.CRAFTLANDER.COM

NOTE: WHEN ORDERING REPLACEMENT PARTS A SERIAL NUMBER WILL BE REQUIRED TO ENSURE RECEIPT OF CORRECT ITEMS

INNER FRAME ASSEMBLY

Rev	Date	Description	Int
 			
		402 Southline Rd. Roscommon, MI 48653	
Scale: None		Approved by:	Drawn by: FS
Date: 3/27/13			
Assembly and part locations for HIGH LIFT MH-VHL60120 INNER FRAME ASSEMBLY			Drawing Number A-MH-VHL60R-15-2