

Note bolt thread area should be on outside of hoist


If this print has colored cables they are for easier understanding of how they are strung. Cables from the factory are colored too. They won't all match to below colors.

READ MANUAL BEFORE USING HOIST.

Manual, parts list and drawing on the web WWW.CRAFTLANDER.COM

Jam nuts around plate on wheel tight, handle should spin freely

SEE PARTS LIST FOR ABOVE PART NUMBERS DOCUMENT# V45PARTSLIST

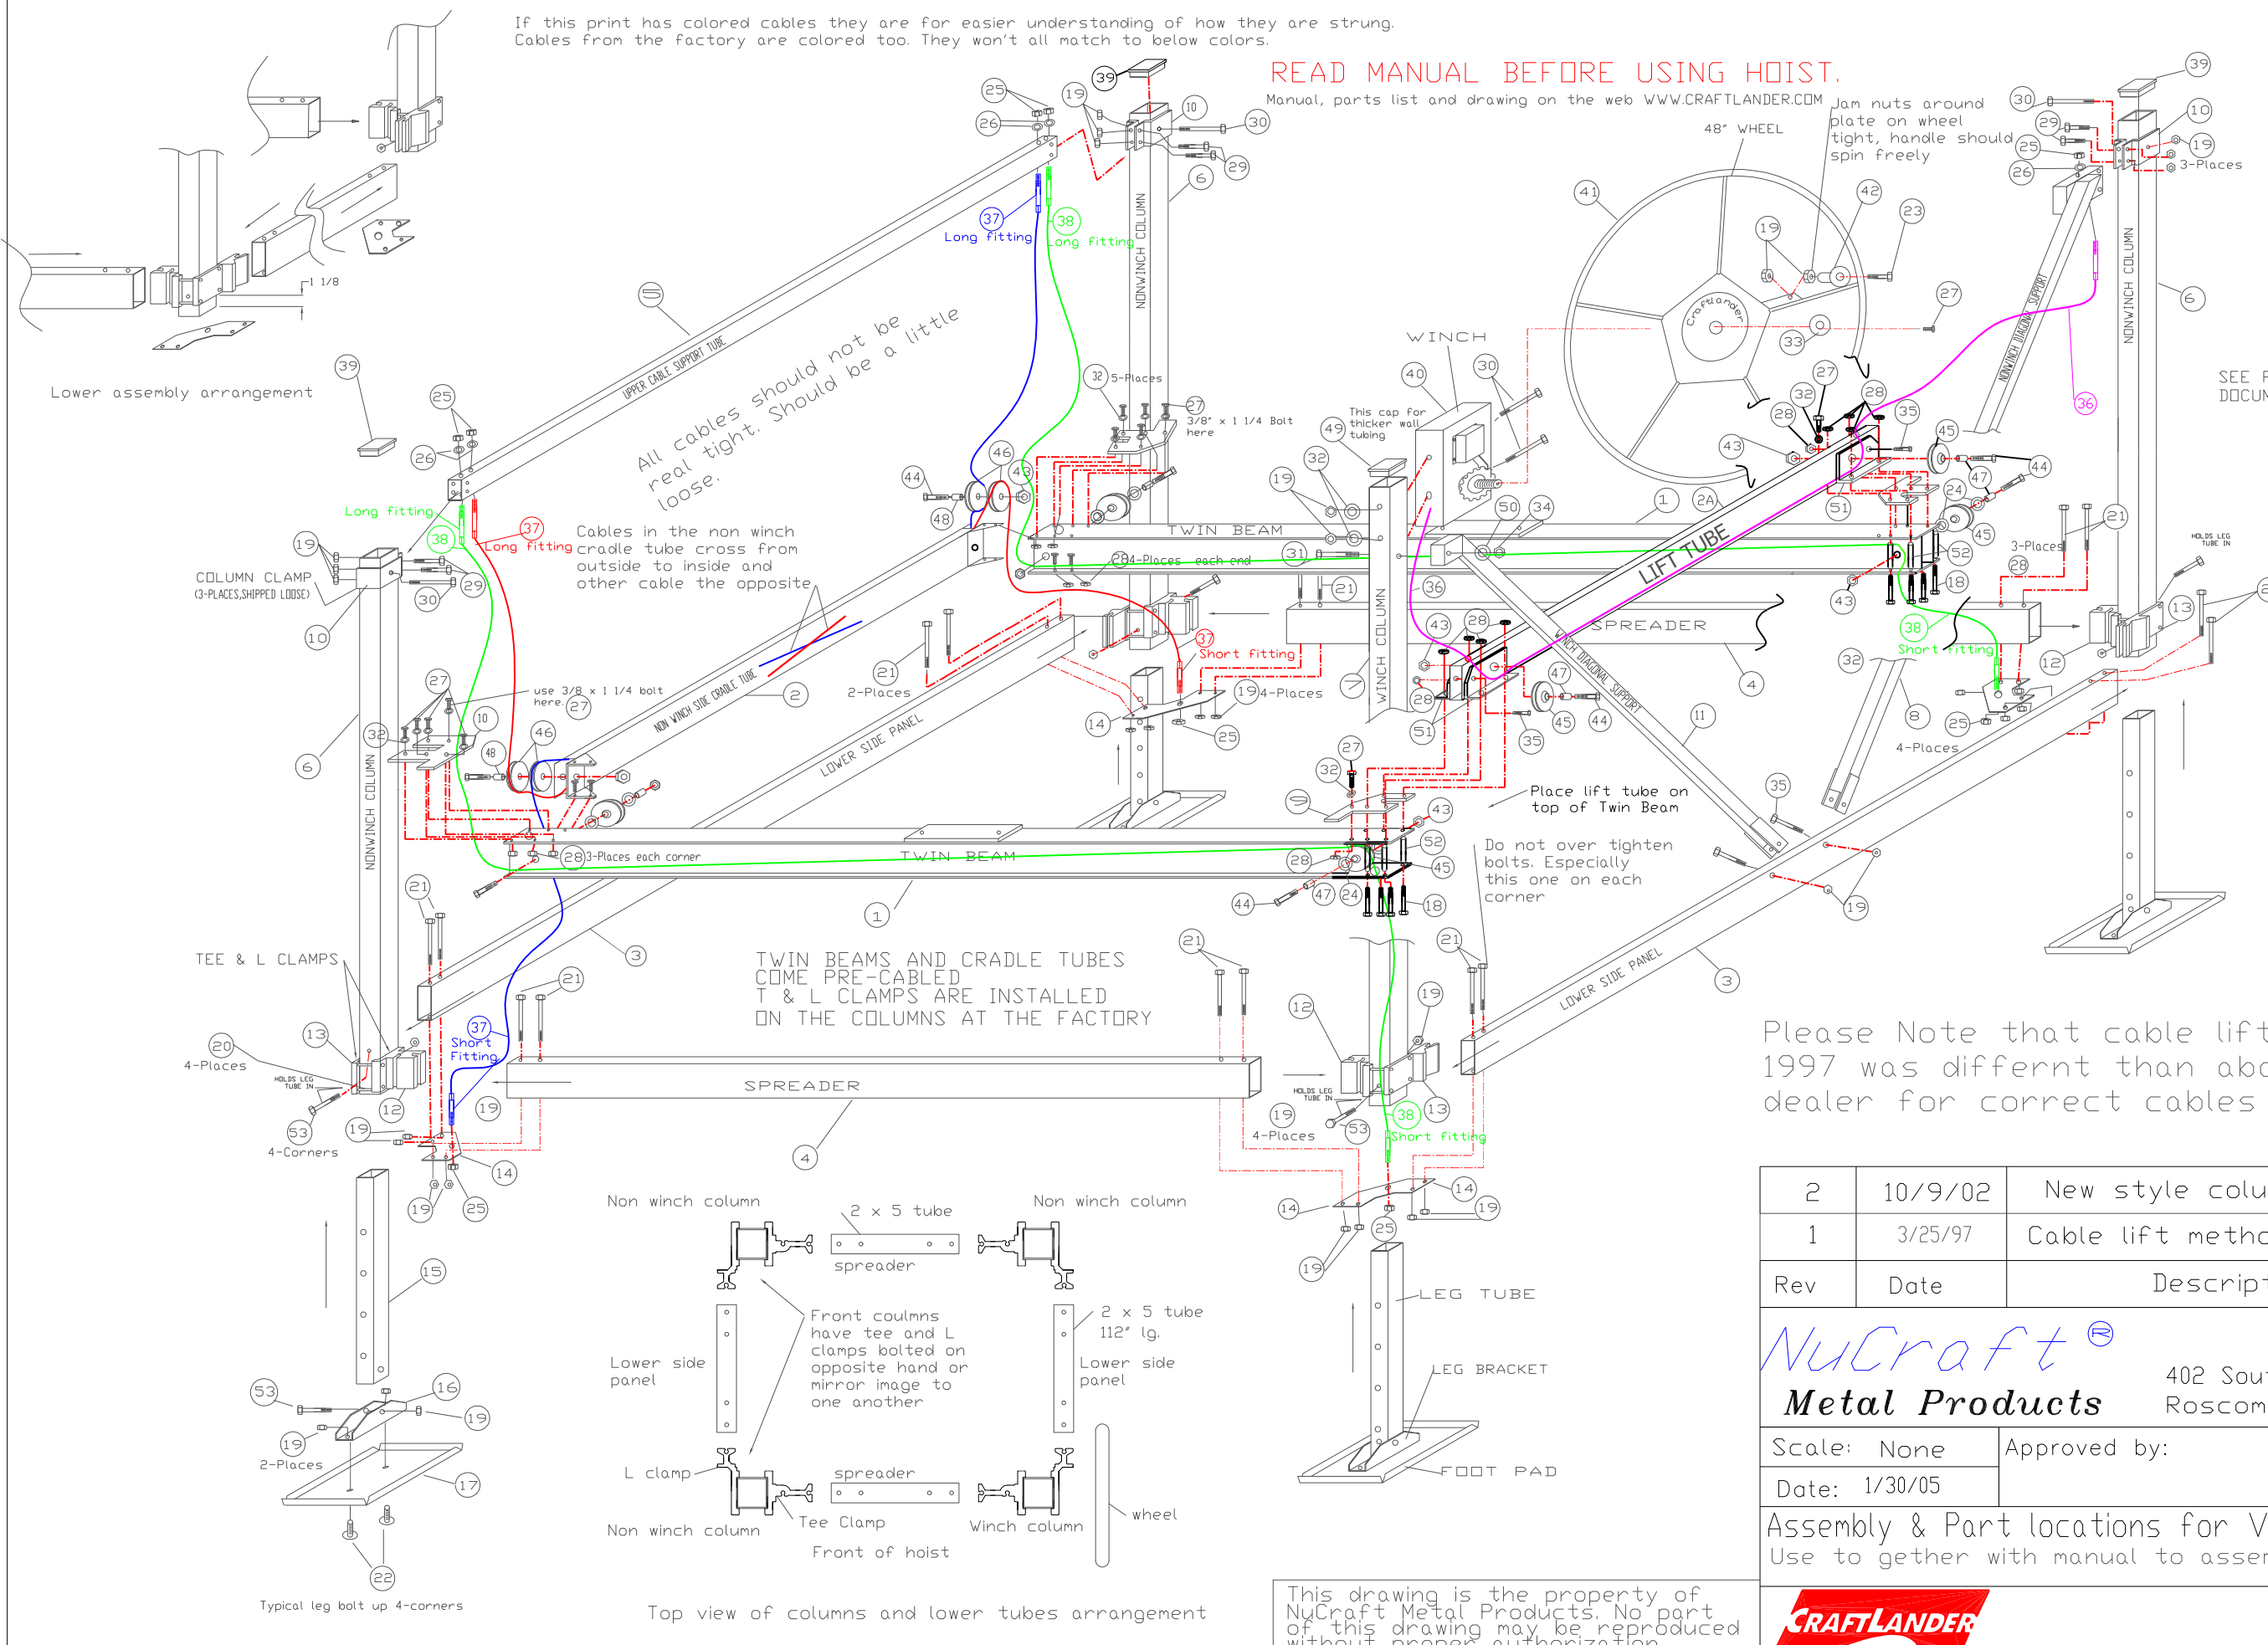

Please Note that cable lifting method before 1997 was different than above. Please contact dealer for correct cables and parts.


2	10/9/02	New style column guides	SB
1	3/25/97	Cable lift method changed	RW
Rev	Date	Description	Int

NuCraft® Metal Products
 402 Southline Rd.
 Roscommon, MI 48653

Scale: None Approved by: Drawn by: RLW
 Date: 1/30/05 Revised by: SB

Assembly & Part locations for V35108 and V35120
 Use to gether with manual to assemble hoist.

CRAFTLANDER
 Drawing Number V35Assembly

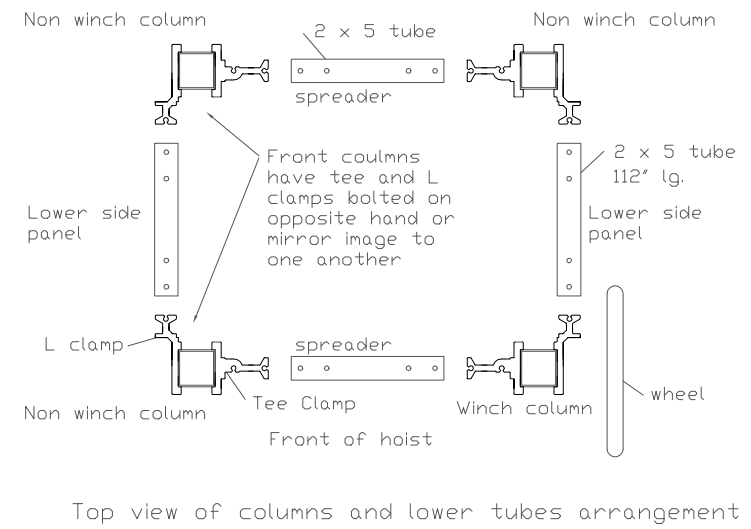

This drawing is the property of NuCraft Metal Products. No part of this drawing may be reproduced without proper authorization.