Exploded View of Upper Cable Sheave/Cable Cover Pre-Assembled

Cable with fitting

Cable without fitting

Note bolt thread area should be on outside of hoist

If this print has colored cables they are for easier understanding of how they are strung.
Cables from the factory are colored too. They won't all match to below colors.

AN ASSEMBLY VIDEO FOR THIS HOIST IS AVAILABLE ONLINE AT: WWW.YOUTUBE.COM/CRAFTLANDER

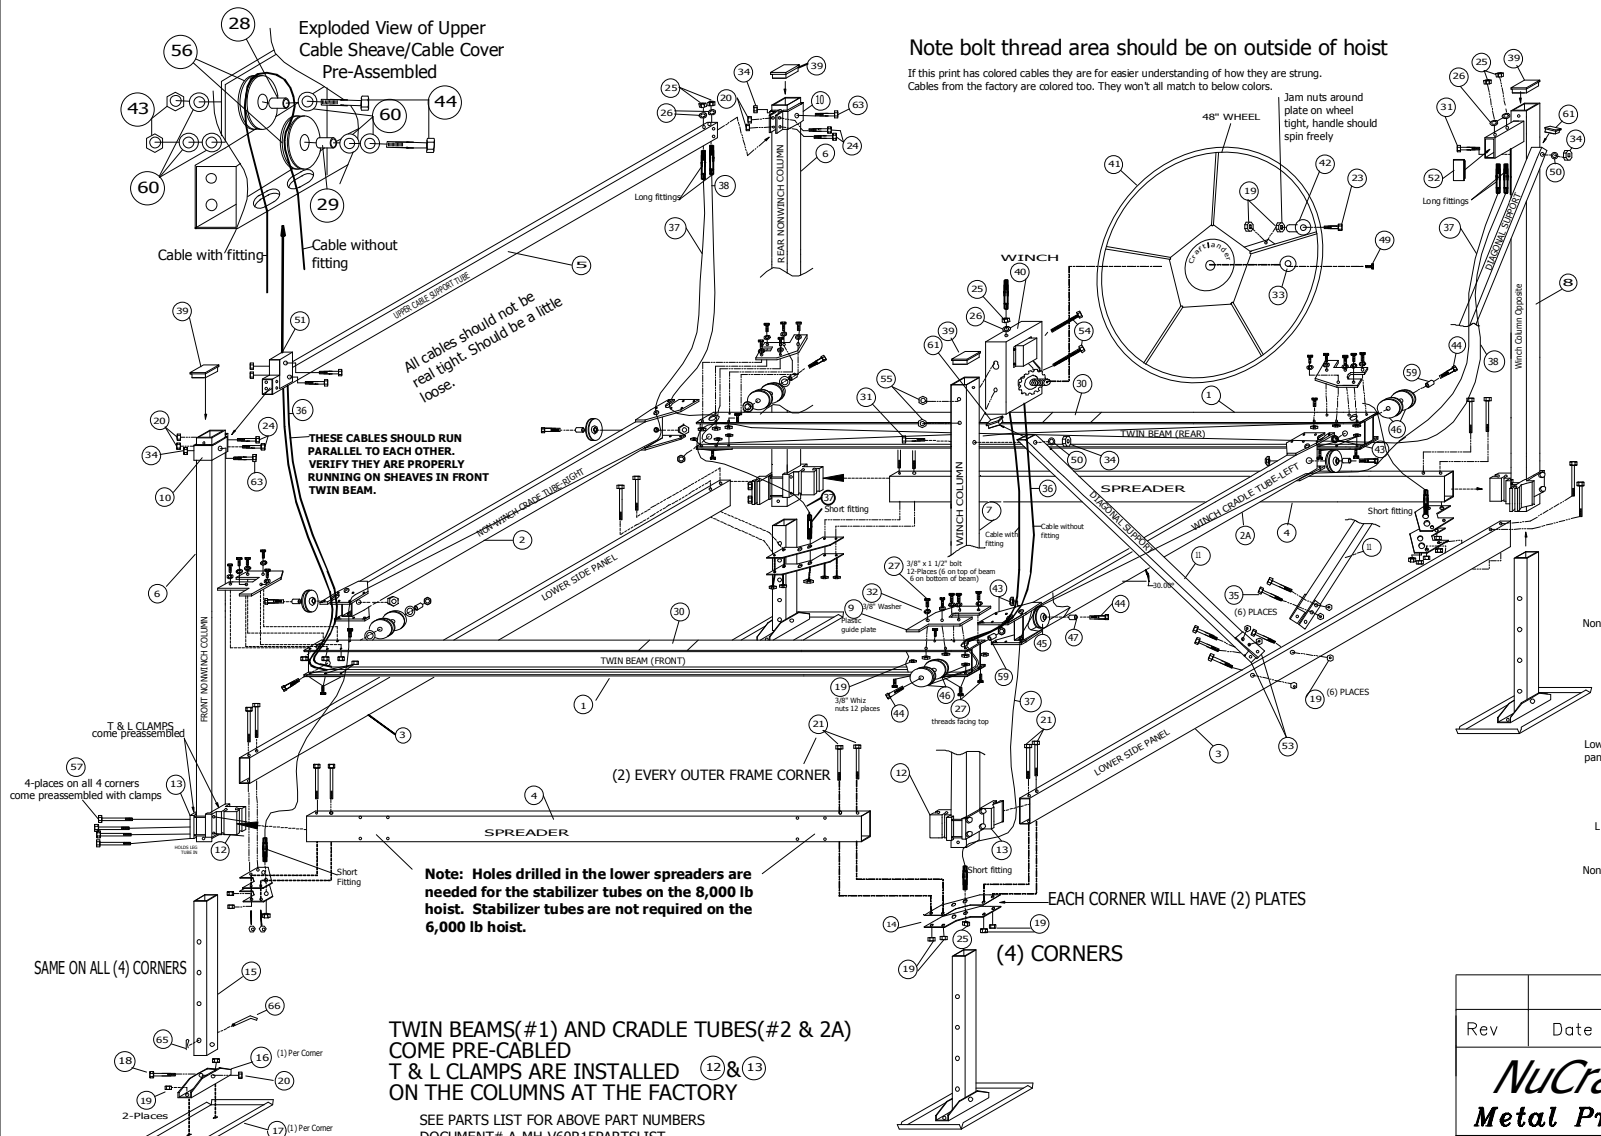

Note: Holes drilled in the lower spreaders are needed for the stabilizer tubes on the 8,000 lb hoist. Stabilizer tubes are not required on the 6,000 lb hoist.

TWIN BEAMS(#1) AND CRADLE TUBES(#2 & 2A) COME PRE-CABLED
T & L CLAMPS ARE INSTALLED (12)&(13) ON THE COLUMNS AT THE FACTORY

SEE PARTS LIST FOR ABOVE PART NUMBERS
DOCUMENT# A-MH-V60R15PARTSLIST

READ MANUAL BEFORE USING HOIST.
Manual, parts list and drawing on the web WWW.CRAFTLANDER.COM

NOTE: WHEN ORDERING REPLACEMENT PARTS A SERIAL NUMBER WILL BE REQUIRED TO ENSURE RECEIPT OF CORRECT ITEMS

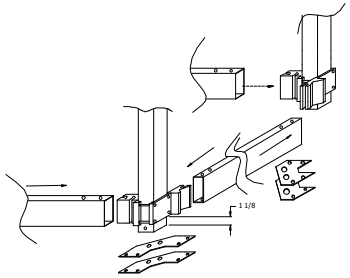

Lower assembly arrangement

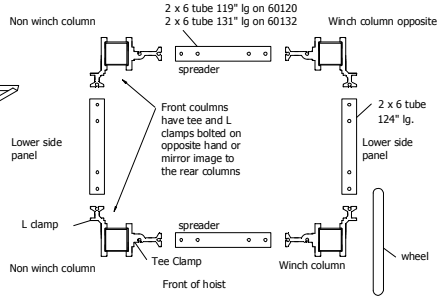

Top view of columns and lower tubes arrangement

Rev	Date	Description	Int

NuCraft Metal Products
402 Southline Rd.
Roscommon,MI 48653

CRAFTLANDER

Scale: None	Approved by:	Drawn by: FS
Date: 3/19/13		
Assembly and part locations for MH-V60120 & MH-V60132		Drawing Number A-MH-V60R-15